



**SLINGSHOT LLC**

[www.slingshotwholesale.com](http://www.slingshotwholesale.com)

PHONE: 304.375.2553

FAX: 304.375.2217

COMPANY: \_\_\_\_\_

CONTACT: \_\_\_\_\_

JOB NAME: \_\_\_\_\_

PHONE: \_\_\_\_\_

FAX: \_\_\_\_\_

E-MAIL: \_\_\_\_\_

**Storefront Install With Head Receptor**


Data Sheet: SF10.3.4

3-2010

Wall: The storefront units will be installed after the wall is constructed. Verify rough opening dimensions on shop sheets before ordering material.

Female head receptor

Clean, smooth, sturdy surface to anchor frame into.

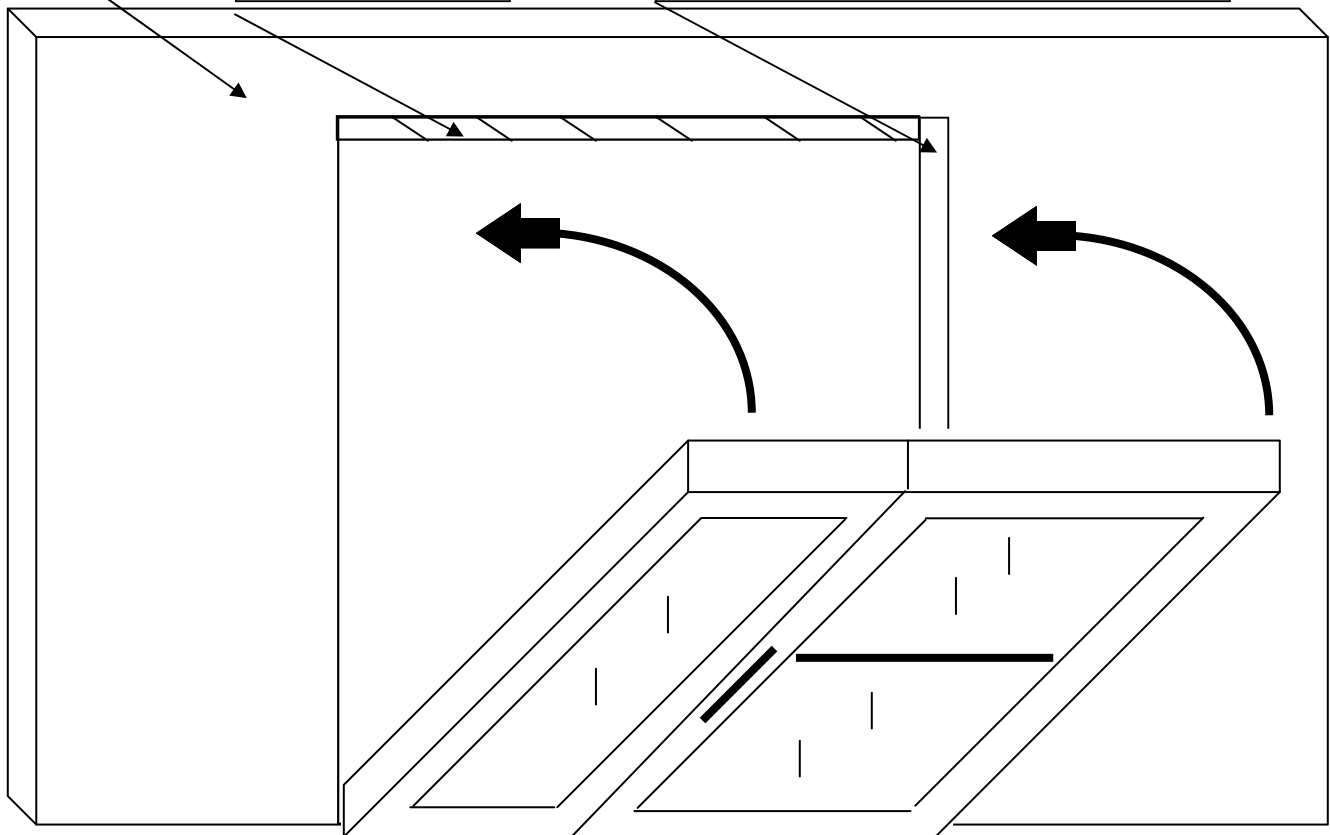

- Step 1: Install the female component of the receptor.
- Step 2: Install sill flashing, if required.
- Step 3: Tilt storefront unit into the opening and position in against the female receptor.
- Step 4: Center the unit in the opening (recommended 1/4" gap on both sides.)
- Step 5: Snap in "male head receptor."
- Step 6: Drill & secure through threshold and or sill members of sidelite.
- Step 7: Caulk

SIDE VIEW OF THE RECEPTOR ASSEMBLY

Female Receptor

Male Receptor

Door Frame / Sidelite

